

 


## TP600 Quick Reference Guide

### TP600



#### Start up

 

When the spa is switched on, a start up sequence of numbers will appear on the display. If no button is pressed, LINK will appear after the start up sequence. Press any button to link the panel with the system.


The spa will enter Priming Mode. After Linking, press the Jets Button(s)  to turn the pumps on and off to verify that all air is purged from the plumbing, particularly the plumbing associated with the heater. If the spa has an Eco Filtration Pump, the light  Button turns the Circ Pump on and off during Priming Mode. Priming Mode will end automatically in 4 minutes. Pressing Temperature Button Down  will exit Priming Mode manually. When Priming Mode ends, Pump1 low will start if no Circ Pump is present, however the water temperature will not appear for a minute or so. Once the water temperature is recognized by the system, and if it is below the Set Temperature, the heater will start.

#### Default Pre-Set







The default preset temperature is 38C in Ready Mode  Warm. The Filter Cycles are 8:00 to 12:00 and 20:00 to 0:00

#### Temperature Adjustment



TP600 touch pad has the Up  and Down  buttons as Temperature Buttons. While TP400 only has a single Temperature Button.




Press the Warm Button  once and the current Set Temperature will begin to flash on the LCD. (The Set Temperature and the actual water temperature are often different.) While the numbers are flashing, press the Warm Button again to change the Set Temperature. Press-and-hold for faster adjustment. After the new Set Temperature stops flashing, in about 10 seconds, the actual temperature is displayed again and the new Set Temperature is programmed. The spa will now heat to the new Set Temperature as needed.

#### Set the Time-of-day

Press , then repeatedly press  until 'TIME' appears in the LCD. Press  to select the hour and press  to set and move to minutes. Press  to set the minute. Press  or wait for 10 seconds to go back to the Main Screen.

#### Dual Temperature Ranges (High Vs Low)

This system incorporates two temperature range settings with independent set temperatures. The High Range is indicated in the display Range up . The Low Range is indicated in the display Range down .

To change the Temperature Range, press , then , and press  to toggle the Range arrows in the LCD. Press  or wait for 10 seconds to go back to the Main Screen.

These ranges can be used for various reasons, with a common use being a 'ready to use' setting Vs a 'vacation' setting. Each range maintains its own set temperature as set by the user. This way, when a range is chosen, the spa will heat to the set temperature associated with that range.

High Range can be set between 26.5°C to 40°C.

Low Range can be set between 10°C to 36°C.

#### Setting Ready and Rest Mode

READY mode will circulate water every 30 minutes in order to maintain a constant water temperature, heat as needed, and refresh the temperature display.

